

GSCJ-8301B1-5 PCB Magazine Loader And Unloader Rack Automatic PCB Loader

Basic Information

Place of Origin: ChinaBrand Name: GS

Model Number: GSCJ-8301B1-5

• Minimum Order Quantity: 1 PCS

Price: USD+negotiable+pcs
 Packaging Details: 380*520*580mm
 Delivery Time: 1-7 days

• Payment Terms: T/T

• Supply Ability: 1+pcs+per days



Product Specification

• Size: 355 X 500 X 563 Mm

Adjustment Method: Handle
Base Material: Plate Metal
Reference Position: A34 Mm, B34 Mm

Side Board Structure: 5 SheetsLead Time: 1-7 Days

Highlight: Automatic PCB Magazine Loader,
 Automatic PCB Magazine Unloader,

Automatic PCB Magazine Unloader, GSCJ-8301B1-5 Automatic PCB Loader



More Images



Product Description

GSCJ-8301B1-5 Loading and Unloading Rack for PCBs - Automatic PCB Loader with Storage and Transfer Frame for Circuit Boards and Substrate Boxes | GSSMT, PCB Magazine Loader, PCB Magazine Rack, SMT PCB Magazine, PCB Magazine Unloader, PCB Magazine Handling, PCB Magazine Storage, PCB Magazine Transport, PCB Magazine Capacity, PCB Magazine Holder, PCB Magazine System.

Installation Guide

- 1. Install the Rack: Ensure the rack is aligned and flush with the base plate.
- 2. Secure the Columns: Use screws to fix the four columns firmly.
- 3. Attach the Side Panel: Align the holes and tighten the screws.
- 4. Position the Movable Side Panel: Ensure the bottom edge is close to the rack.
- 5. Install the Base Plate: Push the circular pin of the latch upward and move the side panel.
- 6. Install the Stopper: Attach it at the spring position, facing downward.

Special Note: Pay attention to steps 4 and 5. The circular pin of the latch must align precisely with the circular hole on the base plate. Accurate positioning is crucial to avoid misalignment; ensure synchronization in all directions.







+8613728696610



liyi@gs-smt.com



smtmachinepart.com